

User's Manual Brief

USB1.1 NetLink Cable

Introduction,

There are three drivers for this USB1.1 NetLink Cable. But we only use one of them at the same time:

1. NetLink Driver: taking place of Netcard services, you can build up a local area network without any network adapter, and it can work in Win 95/98/ Me/Nt /2000, or above.
2. DataLink Driver: do the same work as DataLink bridge, and it can work in Win 95/98/Me/Nt/2000, or above.
3. The third driver only for MAC user.

Hardware & Driver Installation.

1. The first drivers (NetLink) installation:

Prepare: Before you start install hardware, software into your machine, please insert CD driver in your CD-ROM.


Step 1: From the driver CD, there is a file setup.exe for installing in "USB Netlink cable 1.1/ windows driver /NET_DRIVER/". Please click it then into setup procedures.

Step 2: Please always click Next button until

Finish to install completely.

Step 3: Plug the NetLink cable into your machine and reboot computer.

Operation: double click "Genelink" Icon on the desktop, you may find other machine in it. The machines must install the same NetLink cable as above steps. You may see other machine's host name and all information sharing, including printer, modem, etc. Attention: in step 2, you may see following window:

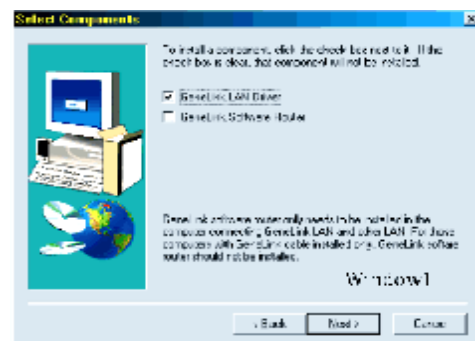

If you want to let your machine Link with the Ethernet network, and share resource in it, then the machine in the Ethernet (Link with your computer), need to install software Router, and select the 2nd option "Genelinksoftware Router" in Window 1. The second driver can auto run Network configure, please don't try to change it, or you will leads to the system fails. This NetLink support hot plus and play until install it completely.

2. The second driver (DataLink) installation: The drive will not run while "NetLink" " driver exist, and the system may ask you to uninstall the "NetDriver". You'd better press "Enter" to accept it. You may install "Netdriver" when you need it next time.

Step 1, Find and run setup.exe for installing in CD rom: "USB Netlink cable 1.1/ windows driver / DIRECTLINK/"

User's Manual Brief

USB1.1 NetLink Cable

Introduction,

There are three drivers for this USB1.1 NetLink Cable. But we only use one of them at the same time:

1. NetLink Driver: taking place of Netcard services, you can build up a local area network without any network adapter, and it can work in Win 95/98/ Me/Nt /2000, or above.
2. DataLink Driver: do the same work as DataLink bridge, and it can work in Win 95/98/Me/Nt/2000, or above.
3. The third driver only for MAC user.

Hardware & Driver Installation.

1. The first drivers (NetLink) installation:

Prepare: Before you start install hardware, software into your machine, please insert CD driver in your CD-ROM.


Step 1: From the driver CD, there is a file setup.exe for installing in "USB Netlink cable 1.1/ windows driver /NET_DRIVER/". Please click it then into setup procedures.

Step 2: Please always click Next button until

Finish to install completely.

Step 3: Plug the NetLink cable into your machine and reboot computer.

Operation: double click "Genelink" Icon on the desktop, you may find other machine in it. The machines must install the same NetLink cable as above steps. You may see other machine's host name and all information sharing, including printer, modem, etc. Attention: in step 2, you may see following window:

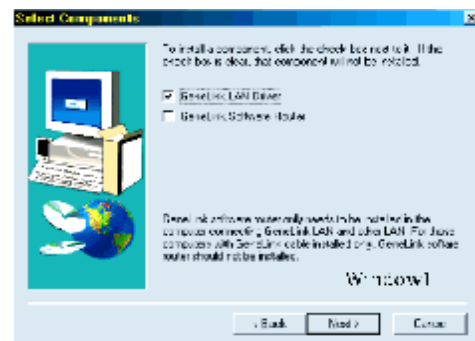

If you want to let your machine Link with the Ethernet network, and share resource in it, then the machine in the Ethernet (Link with your computer), need to install software Router, and select the 2nd option "Genelinksoftware Router" in Window 1. The second driver can auto run Network configure, please don't try to change it, or you will leads to the system fails. This NetLink support hot plus and play until install it completely.

2. The second driver (DataLink) installation: The drive will not run while "NetLink" " driver exist, and the system may ask you to uninstall the "NetDriver". You'd better press "Enter" to accept it. You may install "Netdriver" when you need it next time.

Step 1, Find and run setup.exe for installing in CD rom: "USB Netlink cable 1.1/ windows driver / DIRECTLINK/"

Step 2, Always press Next to finish installation.

Step 3: Plug the NetLink cable into your machine and reboot computer.

Operation: The driver install program make a shortcut icon: Genelink on the desktop in your computer. Double click it you may share the files between two computers.

Step 2, Always press Next to finish installation.

Step 3: Plug the NetLink cable into your machine and reboot computer.

Operation: The driver install program make a shortcut icon: Genelink on the desktop in your computer. Double click it you may share the files between two computers.

